



# Technical Publicatio ns

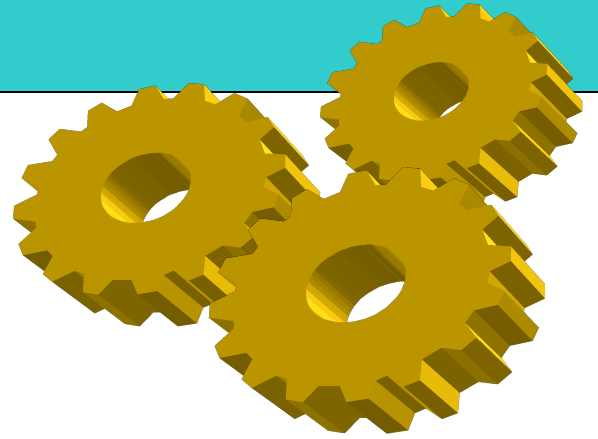


# **Terminal Learning Objective**

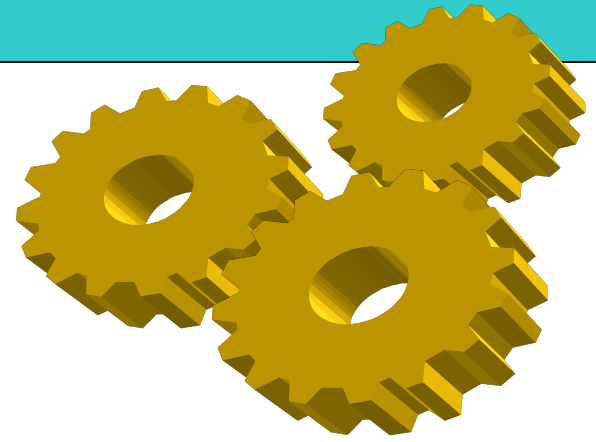

- With the aid of references, to identify the types and uses of technical publications.




# **Enabling Learning Objective**

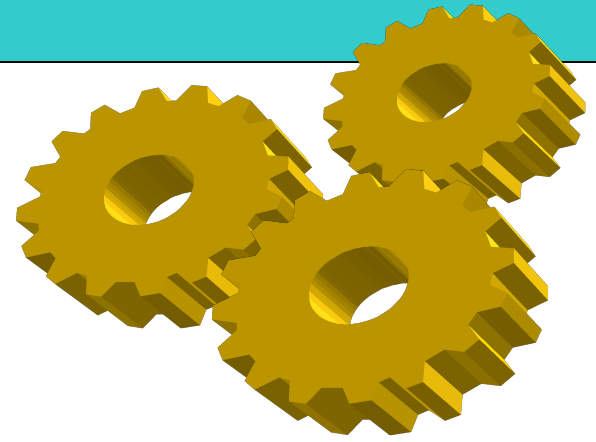

1. With the aid of references, to understand and use the Technical Manual (TM).
  2. With the aid of references, to be able to use the SL-3 Stocklist.
  3. With the aid of references, to be able to use the SL-4 Stocklist
-

# Responsibilities Technical Manuals

---

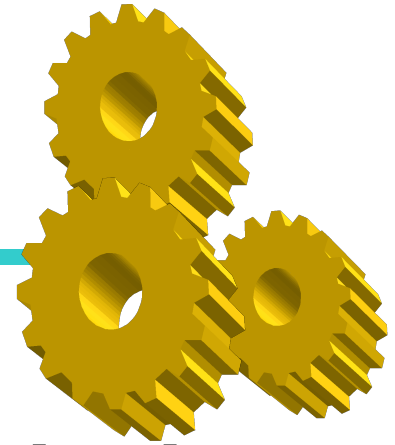


- Perform preventive maintenance checks and services in accordance with the TM.
- Perform corrective maintenance as specified to include:
  - adjustments
  - inspections for serviceability
  - disassembly and assembly of components
  - troubleshooting and testing
  - identifying special tools or equipment

# Responsibilities

## Parts Manuals


---

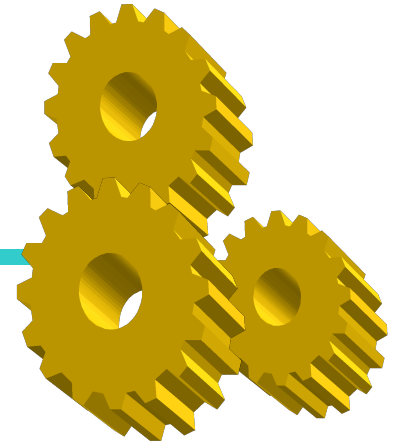


- Correctly identify parts needed to repair or service equipment.
- Extract information used to order parts and ensure they are within your echelon of maintenance.
- Interpret the parts lists drawings to ensure that the assembly process is completed correctly.

# Responsibilities Components List

---

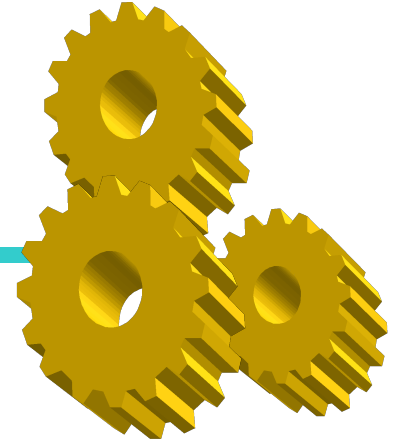


- You will be required to regularly account for tools issued to you using a component list (SL-3).
- You will be required to identify and use special equipment associated with an item of equipment.

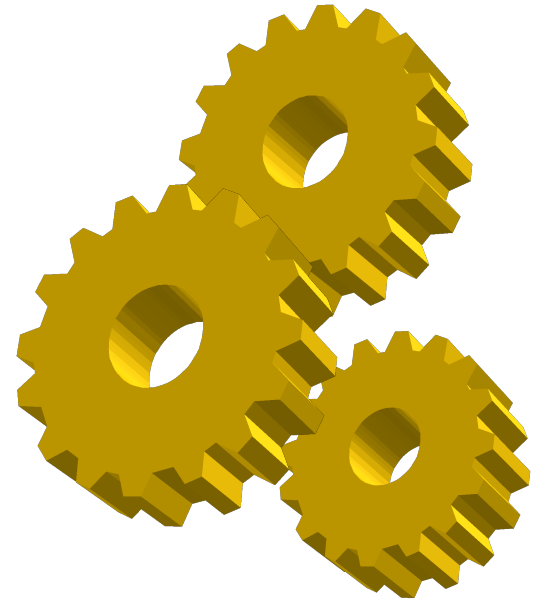

TM

# Purpose


---

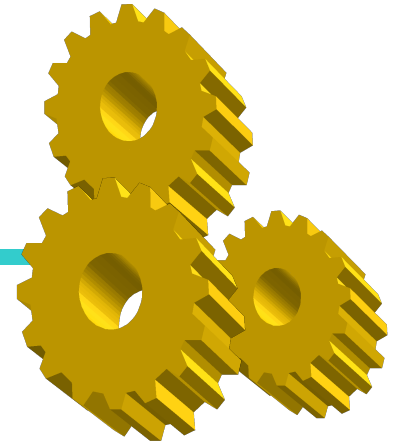

- The TM is used to provide technical information used in the inspection, services, adjustments, removal, installation and testing of the end item and its components.

# Front Cover


---

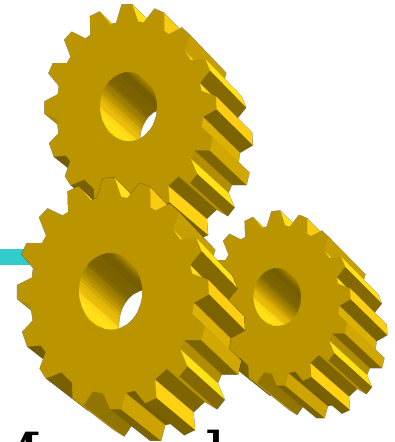

- Short Title: TM-08757A-14/1
  - **TM** = indicates this is a Technical Manual.
  - **08757** = Item Designator number.
  - **A** = part of the ID number, indicates model. Lack of model designator means more than one model is covered.
  - **14** = indicates the echelons of maintenance covered by this publication.
  - **/1** = indicates that this TM has change number 1 incorporated.

# Table of Contents


---

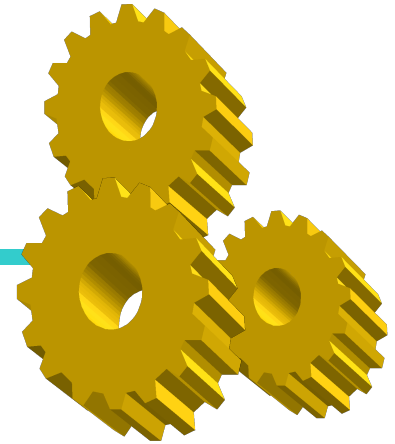

- Provides a general listing of the information contained in the manual. Cross referenced to paragraph and page number.

# List of Illustrations


---

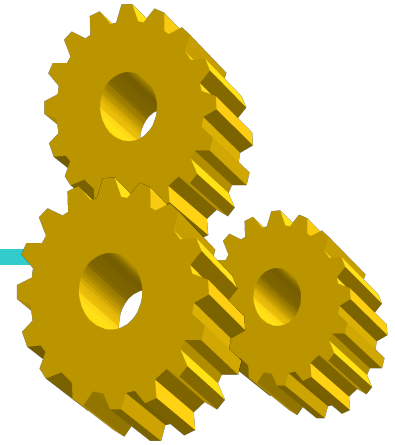

- List all illustrations, cross referenced to page and figure number.

# List of Tables


---

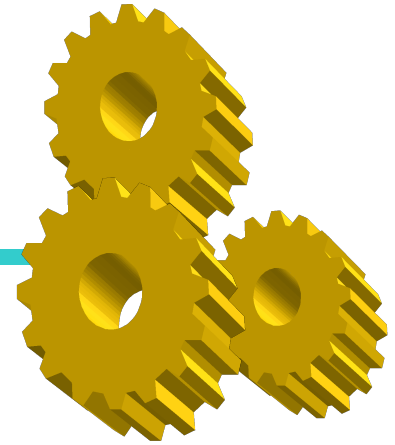

- This section lists tables such as Table of Specifications, Torque Tables, Troubleshooting Charts, etc.
  - Tables are cross referenced to page numbers.

# Safety Summary


---

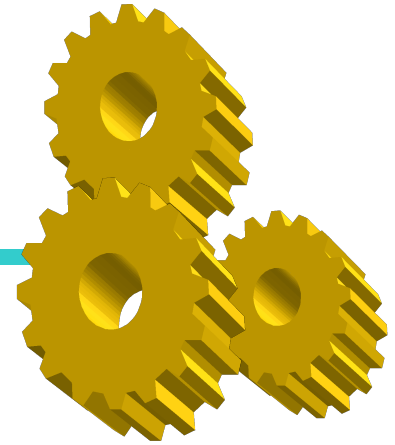

- This is a listing of all safety warnings and caution statements that are used in the manual, compiled and listed in the front of the manual.

# General Description Section


---

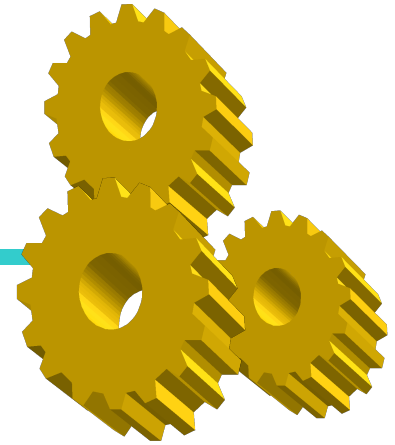

- This section describes features and capabilities of the equipment as well as weight, measurements, and other specifications of the equipment.

# Preparation for Use


---

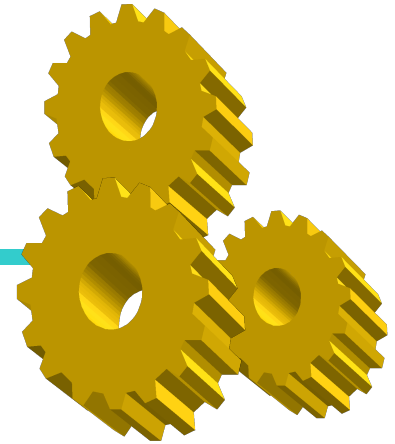

- This section will list procedures and requirements of the operator / mechanic prior to putting the equipment into service.

# Operating Instructions


---

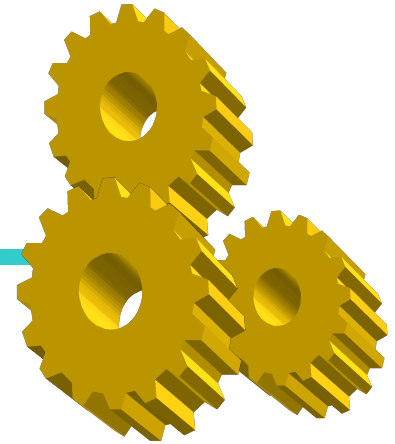

- Tells the user how to start, run and utilize all controls and functions associated with the item of equipment.

# Lubrication


---

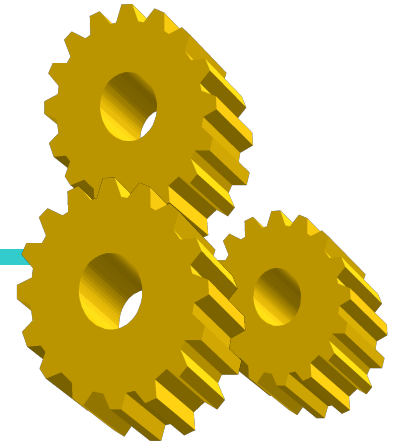

- This section provides preventive service intervals and detailed lubrication instructions required to be performed by operators and mechanics.

# Maintenance Instructions


---

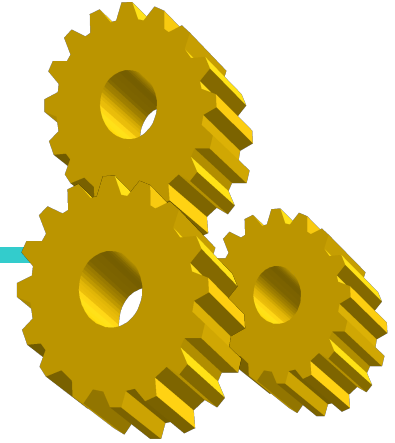

- This section will contain maintenance instructions for the inclusive echelons of maintenance.

# Glossary


---

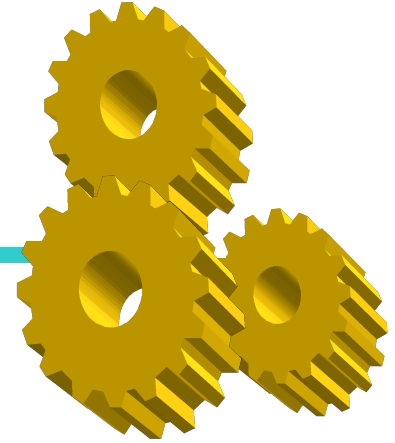

- Provides definitions for abbreviations and acronyms used in the TM.


# Alphabetical Index

---

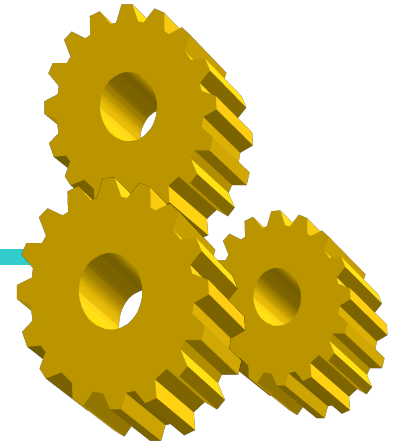

- This is an alphabetical listing of the information contained in the TM.
- This section should be used to locate specific information quickly by page or paragraph number.


# Questions

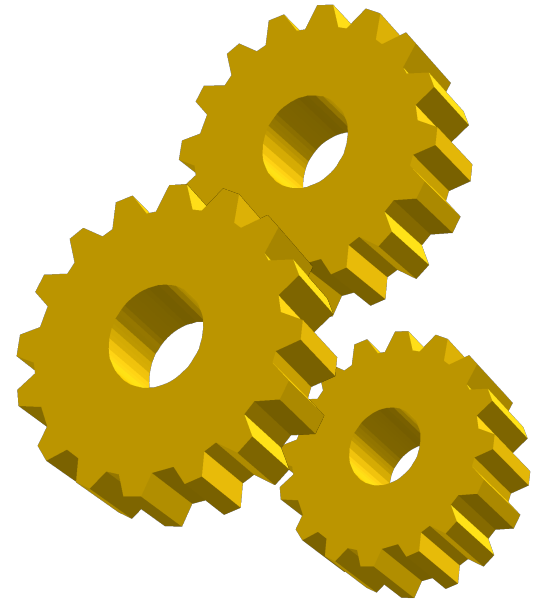




I'll sure be  
glad when  
it's break  
time!

SL-3

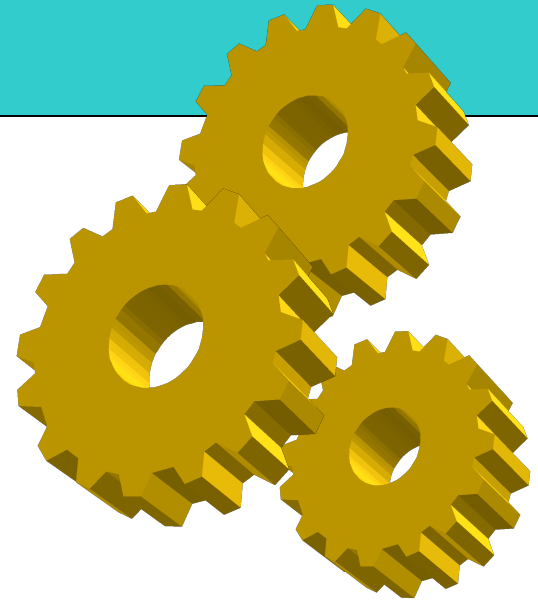


# Purpose

---

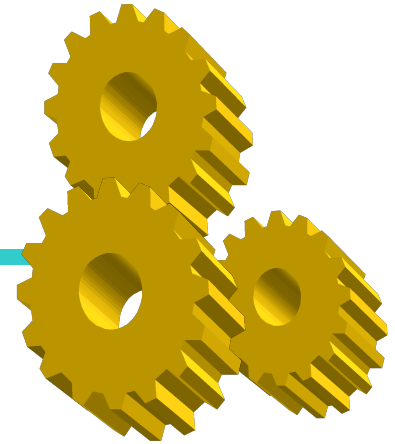


- The SL-3 provides a listing of components and accessories needed to make an item complete, or used with an item.
- These components and accessories *are not* repair parts.
- The main purpose of the SL-3 is for inventory or control and it is read in the same manner as the SL-4.

SL-4

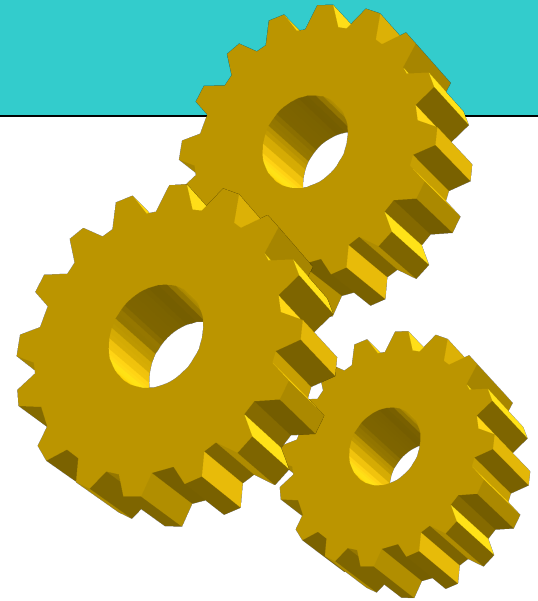

# Purpose

---

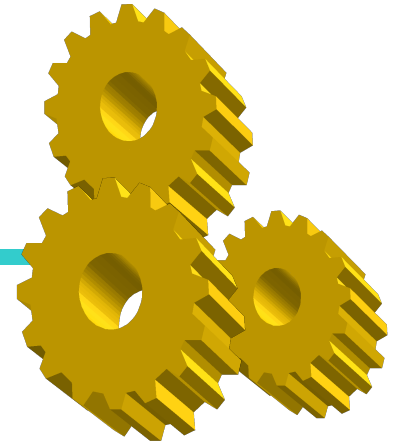


- The SL-4 is used to list and identify repair parts.
- It also provides the requisitioning data for those parts, and special information which may be needed to procure parts.



# Preface

---

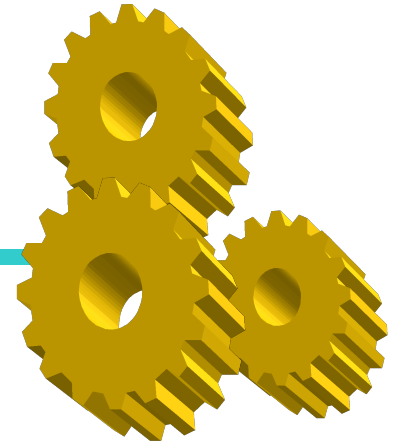


- This section contains information about the SL-4 and how to use it.
- It will define how to interpret the information and codes used in the SL-4.



# Federal Supply Codes for Manufacturers (FSCM)

---

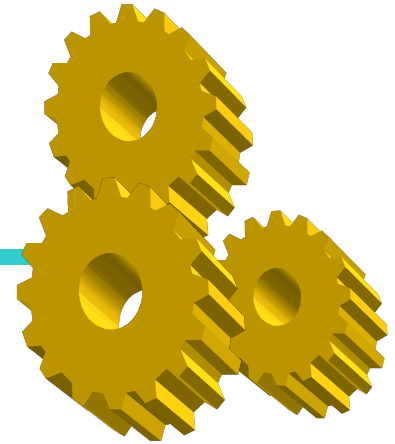


- This is a listing of manufacturers who make parts / components for the item of equipment.
- It lists the name, address and assigned code for each manufacturer.



# Part I

## Item Identification Listing

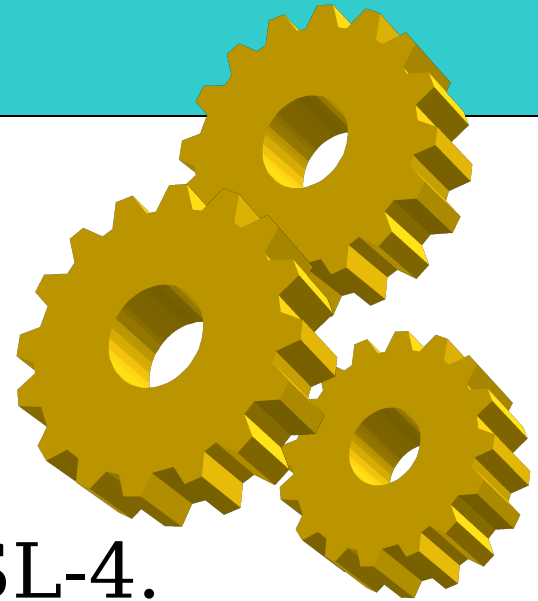


- This listing comprises the main part of the SL-4.
- It is arranged in column format to show information for all required repair parts.
- Illustrations are placed either before, or in close proximity to the part listing.



# Item Identification Listing

---

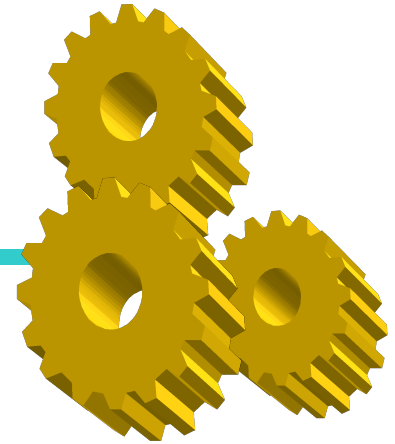

- Column 1 - Item Number
- Column 2 - Model
- Column 3 - National Stock Number
- Column 4 - Reference Designator
- Column 5 - Indenture Code
- Column 6 - Item Identification
- Column 7 - Unit of Measure
- Column 8 - Quantity
- Column 9 - Source, Maintenance Recoverability Code



# SMR Codes


---



- Provides the user with information relative to:
  1. **Source:** Method of obtaining item.
  2. **Maintenance:**
    - a. Lowest level authorized to use, remove or replace the item.
    - b. Who is authorized to perform complete repair to the item.
  3. **Recoverability:** Disposition action on unserviceable items.



# Source Maintenance

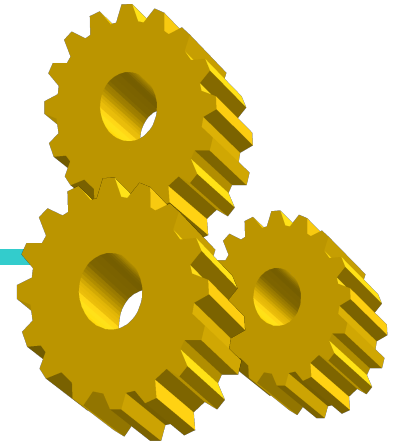

## Recoverability

SOURCE  
CODE

OBTAIN

PA

1 2

POSITIONS

MAINTENAN  
CE CODE

USE

O

3

POSITION

REPAIR

Z

4

POSITION


RECOVERABILIT  
Y CODE

DISPOSE

Z


5

POSITION

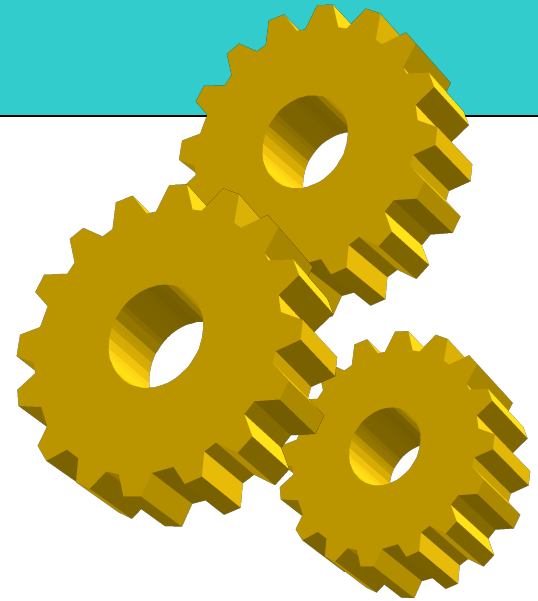


# PAOZZ

---

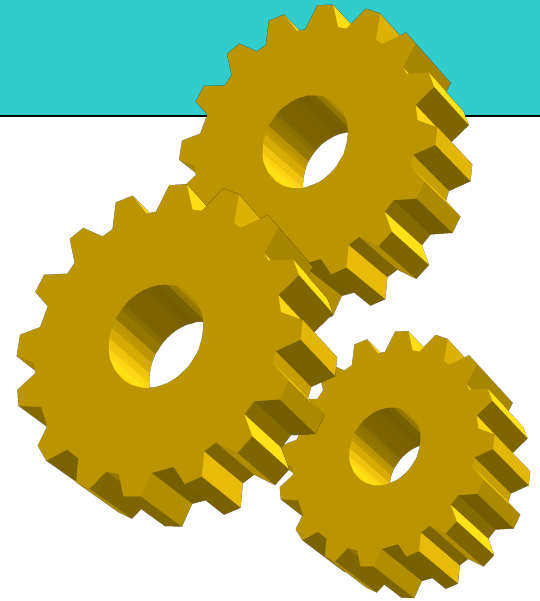


# XBOZZ

---

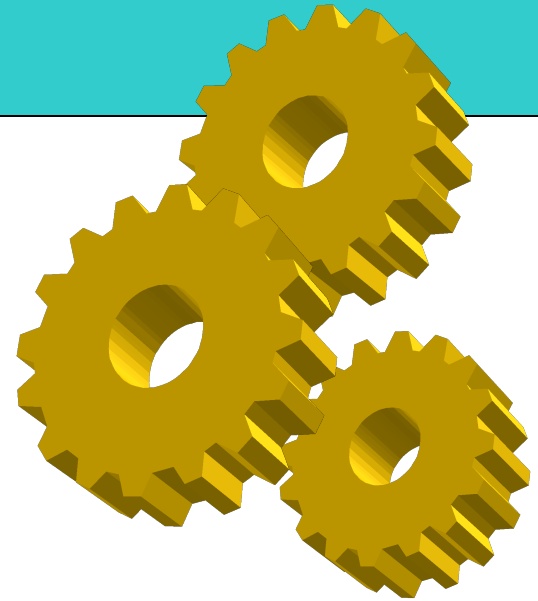

# PAFHD

---

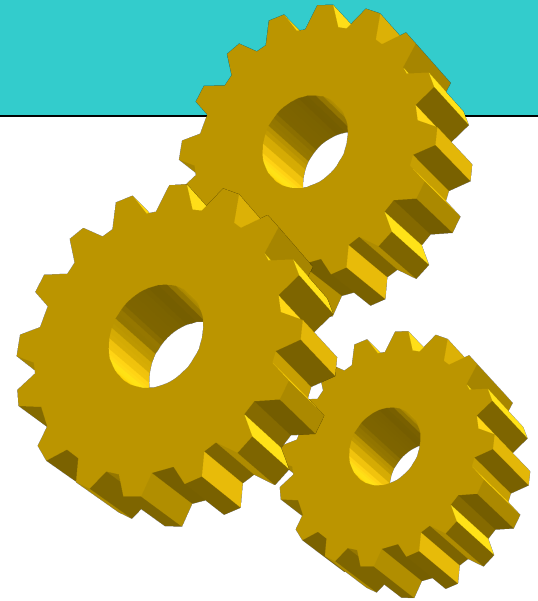


KFOZZ

---


# Part II

## Item Number Cross Reference

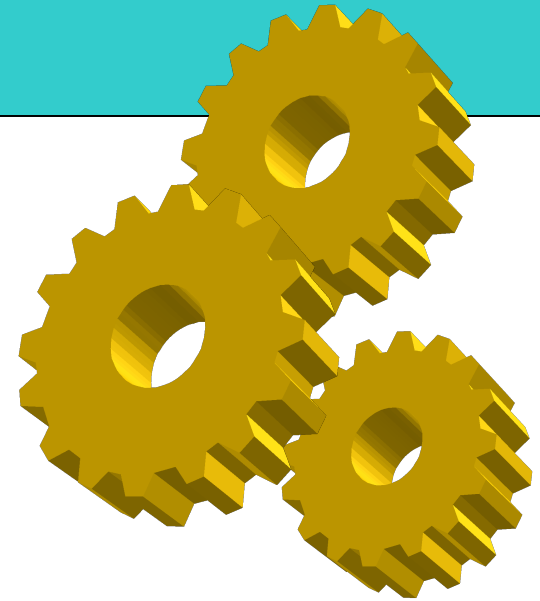

- Cross reference Item Numbers to Part Numbers and Manufacturers Codes.
  - Arranged in numerical sequence.
  - Contains only those Items in Part I which do not have an NSN.
-


### NSN Cross Reference

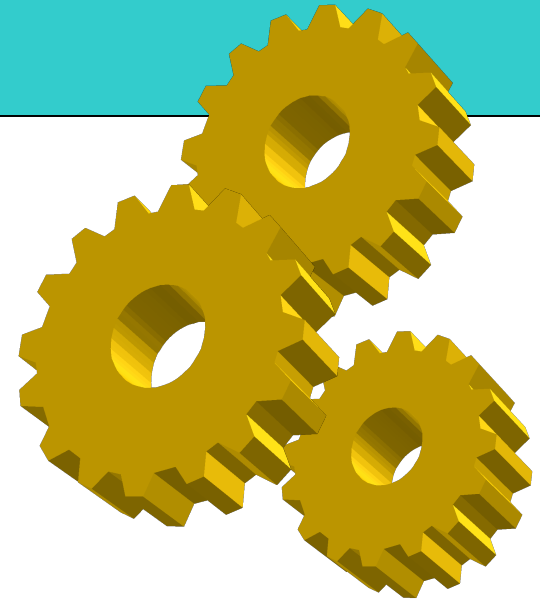

- Cross reference from NSN to Item Number, Part Number and Manufacturers Codes.
  - Arranged in NSN sequence
  - Contains only those items in Part I which have an NSN.
-


# Part IV

## Part Number Cross Reference

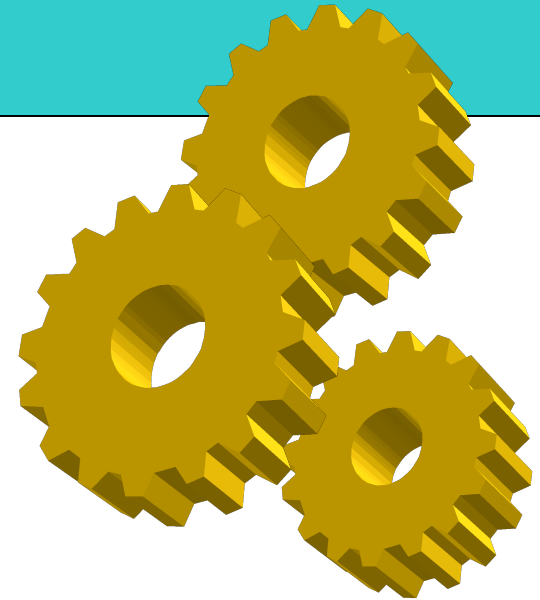

- Cross reference from Part Number to Manufacturers Code, Item Number, and NSN for all items in Part I for which Part Numbers are available.
  - Arranged in alpha numeric sequence by Part Number.
-

113

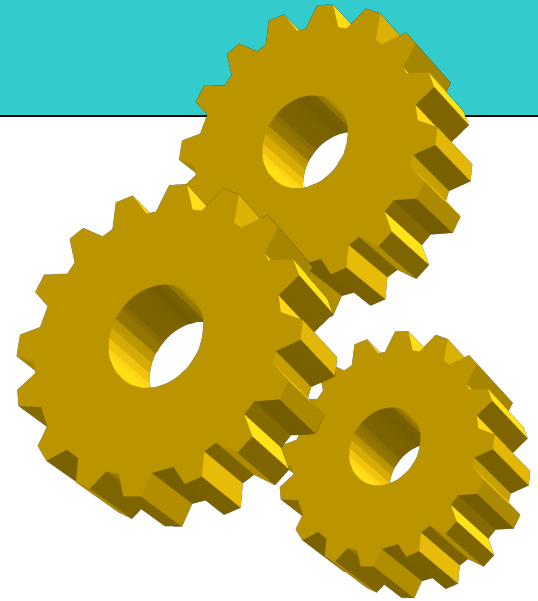

I sure hope those mechanics fixed this machine correctly!

